

HANDING CHANGE INSTRUCTIONS

GRADE 2 LEVER LOCK (TS-WPG2)



1. Remove outside lever:

- Standard Cylinder - Use supplied pick in hole on front of lever. Lever cannot be removed with pick until key is inserted and turned 45 degrees.
- Interchangeable Core – Remove core from outside lever with Control Key, Using small screwdriver or awl, pull back lever clip from inside as shown.


2. Remove tape holding wire to chassis.

3. Pull chassis out of escutcheon and rotate chassis 1/2 turn (180°) maximum.


4. Replace chassis and attach tape.

5. Re-install lever


- Standard: Rotate key while installing
- IC: Insert Core

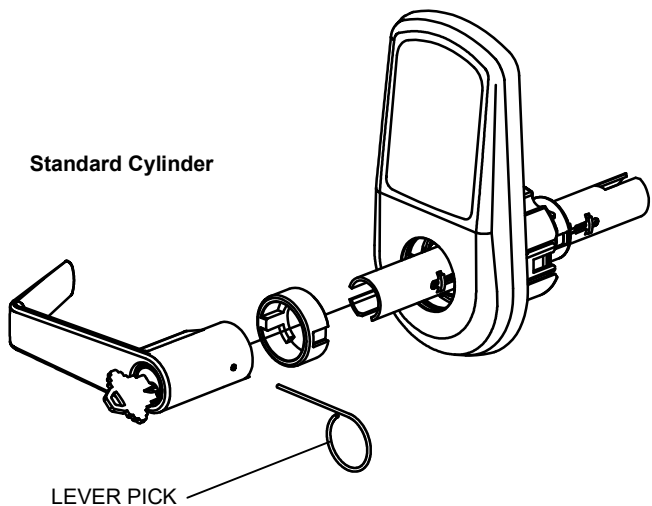

Step 1:

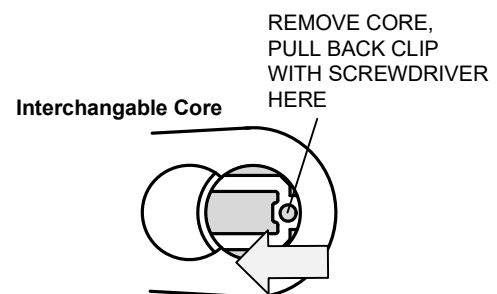

Step 2:

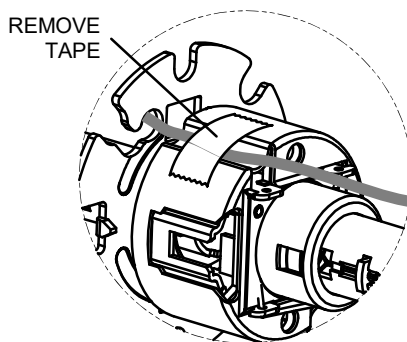

Step 3:

