


# INSTALLATION INSTRUCTION

## GRADE 1 CYLINDRICAL LOCK(TS-WPG1)


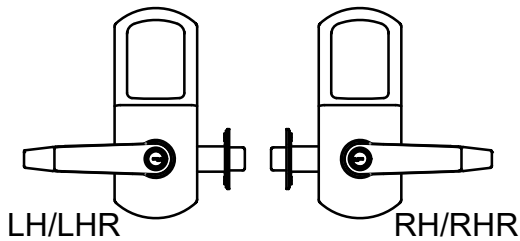


### 1. HANDING CHANGE INSTRUCTIONS GRADE 1 LEVER LOCK(TS-WPG1)

- Before removing existing hardware, ensure handing of new lock is correct for door opening
- If handing of lock is not correct for opening, please visit [TrueSecurePro.com](http://TrueSecurePro.com) for "HANDING CHANGE INSTRUCTIONS GRADE 1 CYLINDRICAL LOCK"

### 2. PREPARE DOOR LATCH

- Prepare door according to template.
- Install latch, radius toward door frame.
  - For 2-3/4" Backset – use long latch.
  - For 2-3/8" Backset – use short latch.
- Secure with (2) small combo screws.

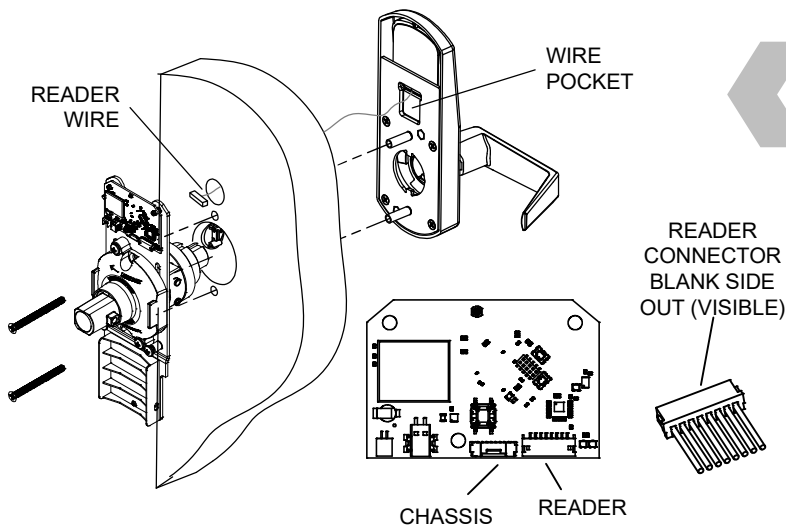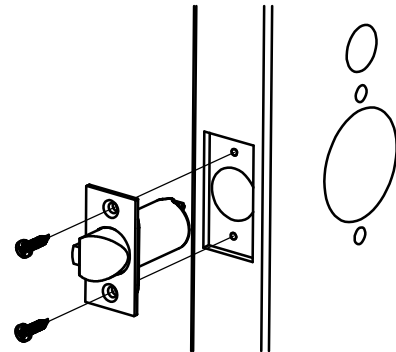


### 3. INSTALL CHASSIS AND OUTSIDE TRIM

- Remove inside escutcheon from backplate
- Install chassis assembly from inside of door.
- Install outside trim assembly – feed reader wire through hole and door and through slot under circuit board. Plug into board. Push extra wire into door cavity.
  - *Wire harness will land into wire pocket.*
  - *Refer to image for location.*
- Secure with (2) flat head screws (thru bolts).

### 4. INSTALL INSIDE ESCUTCHEON

- Install inside escutcheon.
- Secure with (2) pan head screws.

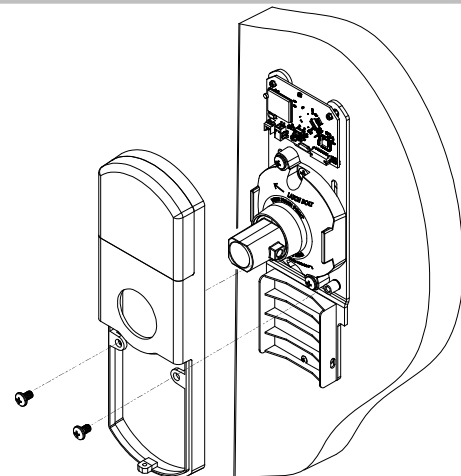

# INSTALLATION INSTRUCTION

## GRADE 1 CYLINDRICAL LOCK (TS-WPG1)



### 5. INSTALL BATTERIES AND INSIDE LEVER

- Install batteries and battery cover with flat head screw.
- Install inside lever and secure with dog point set screw.
- **CAUTION: DO NOT CROSS THREAD**

