


INSTALLATION INSTRUCTION

MORTISE LOCK (TS-WPMX)


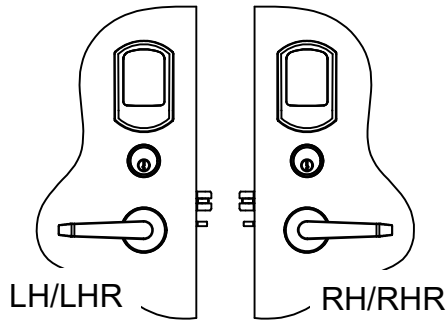


1. CHECK HANDING OF LOCK BODY

- Before removing existing hardware, ensure handing of new lock is correct for door opening.
- If handing of lock is not correct for opening, please visit TrueSecurePro.com for more information.

2. INSTALL CHASSIS, TRIM, TURNPIECE & CYLINDER

- Prepare door according to included template.
- Install mortise chassis while feeding chassis wire into hole on **inside** of door.
- Gently pull wire through hole as chassis is inserted.
- Install trim using included instruction.

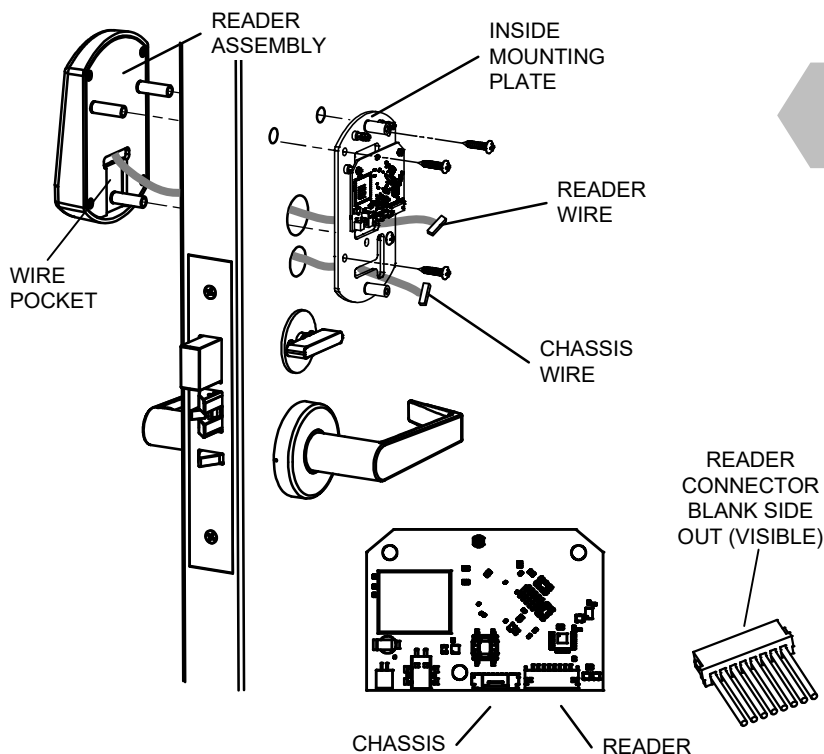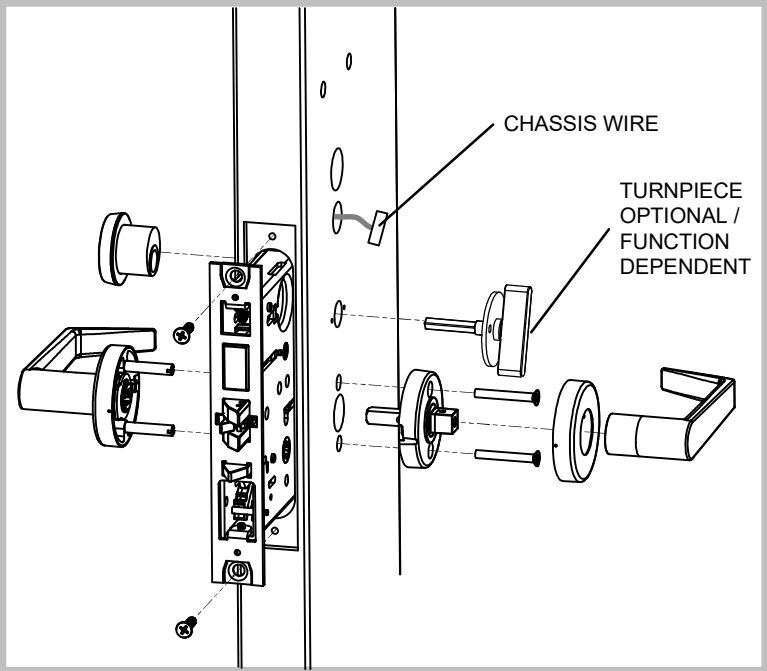

3. INSTALL READER AND INSIDE MOUNTING PLATE

- Install reader assembly and inside mounting plate – feed reader wire through hole in door and through slot under circuit board.
 - *Wire harness will land into wire pocket*
- Feed chassis wire through T slot in mounting plate.
- Secure with (3) M5 x 50 pan head screws (thru bolts).
- Make both wire connections after reader is secure. Push extra wire into door cavity.



INSTALLATION INSTRUCTION

MORTISE LOCK (TS-WPMX)



4. INSTALL BATTERY PACK

- Plug in battery wire to control board.
- Install battery pack over two studs on mounting plate.
- Snap battery pack onto retainers on mounting plate.
- Caution: wire pinch point – Verify no pinched wires

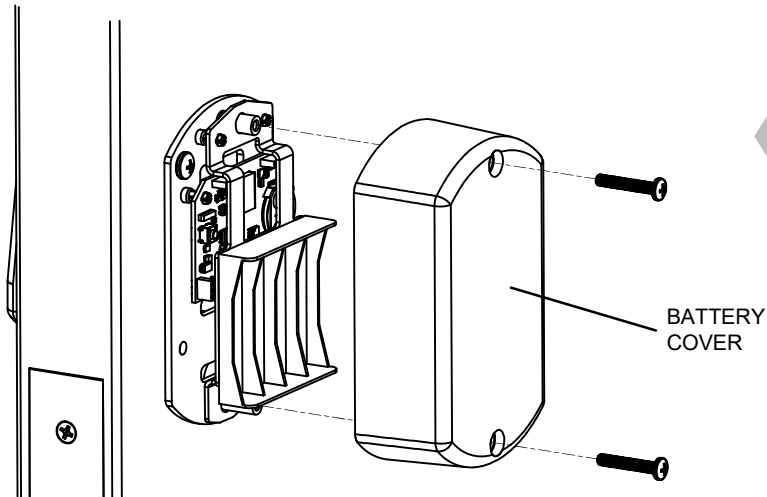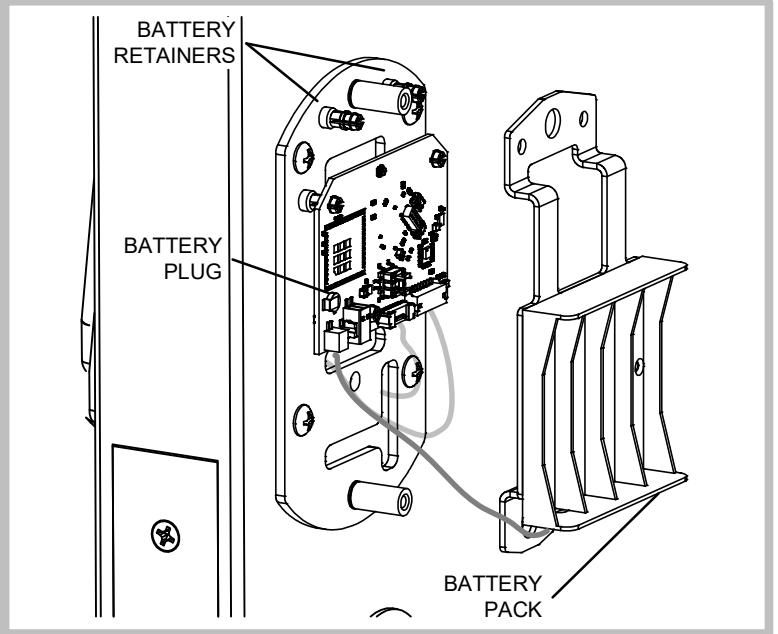

5. INSTALL BATTERIES AND BATTERY COVER

- Install batteries and battery cover with (2) pan head screws.