


INSTALLATION INSTRUCTION

MOTORIZED DEADBOLT (TS-WPDB)

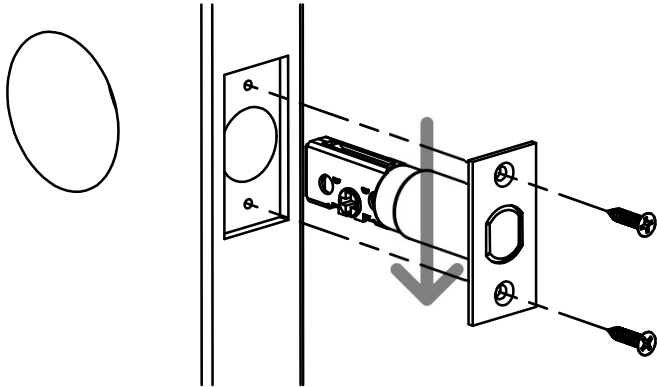

1. PREPARE DOOR & INSTALL LATCH

- Prepare door according to template.
- Retract deadbolt
- Install adjustable latch with cross slot for tailpiece toward bottom.
- Secure with (2) small combo screws.

2. INSTALL OUTSIDE TRIM ASSEMBLY

While looking at the back of the chassis (Figure 1)

- If latch is to the **LEFT**: Rotate tailpiece clockwise to stop in vertical orientation
- If latch is to the **RIGHT**: Rotate tailpiece counter-clockwise to stop in vertical orientation.

Install chassis/escutcheon assembly from outside of door (Figure 2) – feeding reader wire through door hole under the latch.

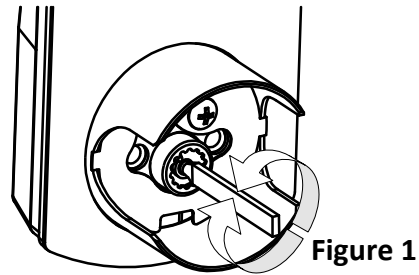


Figure 1


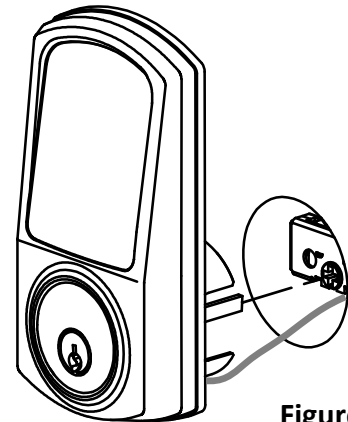


Figure 2

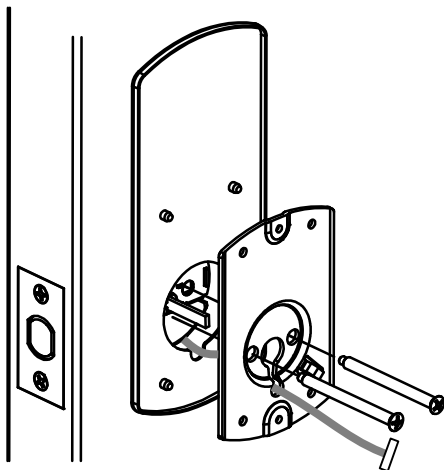

3. INSTALL GASKET & INSIDE MOUNTING PLATE

- Route wire through slot in bottom of gasket and mounting plate
- Install rubber gasket and inside mounting plate. Ensure both sides are vertical
- Secure with (2) pan head screws.

INSTALLATION INSTRUCTION

MOTORIZED DEADBOLT (TS-WPDB)



4. INSTALL INSIDE TRIM AND BATTERIES

- Plug reader wire into socket on control board on back of escutcheon, route wire through hook in mounting plate as shown, install escutcheon onto door.
 - Take care to keep from pinching wire.
- Verify that thumb turn properly operates deadbolt latch smoothly.
- Secure escutcheon with (2) pan head screws.
- Install batteries and battery cover with pan head screw.

